



1. Aussenmantel auf gewünschte Länge zurückschneiden
2. Schirmumflechtung oder Schirmfolie auf Mass «X» zurückschneiden

Fig. 1

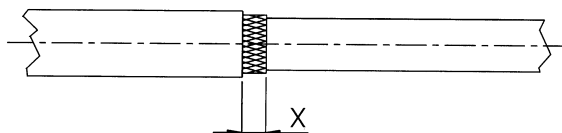


3. Druckmutter (Pos. 1) und Dichteinsatz / Kontakthülse (Pos. 2+3) auf Kabel gemäss Skizze aufschieben
4. Die Schirmumflechtung oder Schirmfolie um ca. 90° umbiegen (Pos. 4)

Fig. 2

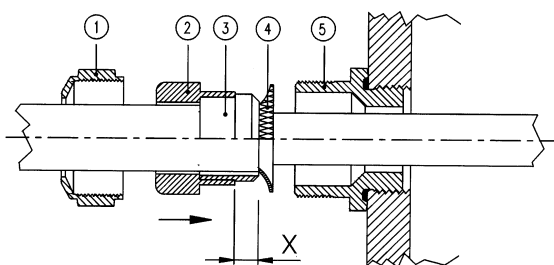

5. Dichteinsatz / Kontakthülse (Pos. 2+3) bis an die Schirmumflechtung oder Schirmfolie schieben

Fig. 3

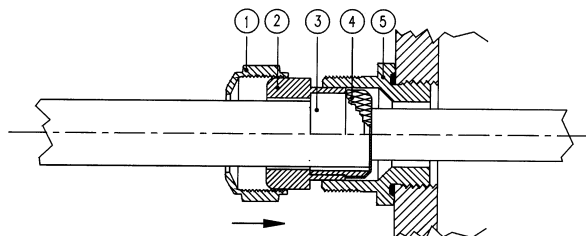

6. Unterteil (Pos. 5) am Gehäuse montieren
7. Dichteinsatz / Kontakthülse (Pos. 2+3) in das Unterteil (Pos. 5) bündig zusammen stecken
8. Druckmutter (Pos. 1) mit dem Unterteil (Pos. 5) verschrauben

1. Cut back outer sheath to desired length.

2. Cut back screen braiding or screen foil to dimension «X»

3. Push the domed cap nut (item 1) and the seal insert with contact socket of the gland (item 2+3) onto the cable as shown in the diagram

4. Bend over the screen braiding or screen foil by about 90° (item 4)

5. Push the seal insert with the contact socket of the gland (item 2+3) up to the screen braiding or screen foil.

6. Mount lower part (item 5) on the housing

7. Push the seal with the contact socket of the gland and (item 2+3) flush into the lower part (item 5)

8. Screw the domed cap nut (item 1) onto the lower part (item 5)